

## **AN014: OPERATION OF AUTO-ZERO**

### **ABSTRACT**

All Gas Sensing sensors are calibrated for accuracy at the factory at multiple different gas concentrations and temperatures. In use, the sensor reference level will change, due to changes in the optical surfaces, accumulation of dirt in the sensor and other degradations. Although the wavelength of the light being emitted by the LED is not affected, the impact of these changes will be to reduce the signal level received by the photodiode in the sensor.

The relationship between CO<sub>2</sub> concentration and measured CO<sub>2</sub> remains linear over time. However, the reference levels may change compared to those stored in the sensor when it was shipped from the factory.

The change in reference level of the sensor can be cancelled out using a process known as zero-setting, sometimes known as baseline correction. This process resets the sensor to a defined concentration level. The sensor zero-point can be reset by the user, or in some circumstances, the sensor can operate fully autonomously and periodically 'auto-zero' without user intervention.

This application note describes how the auto-zero function works in the CozIR family of CO<sub>2</sub> sensors. Each member of the family has an auto-zero function that is enabled by default.


## **AN014: OPERATION OF AUTO-ZERO**

### **TABLE OF CONTENTS**

ABSTRACT.....	1
BASIC PRINCIPLES FOR ALL COZIR® FAMILY SENSORS EXCEPT COZIR®-BLINK.....	3
UART Mode Minimum Counter Threshold (Excluding CozIR-Blink).....	4
I <sup>2</sup> C Mode Minimum Counter Threshold (Excluding CozIR-Blink) .....	4
CozIR®-Blink Minimum Counter Threshold.....	5
STORING THE LOWEST CO <sub>2</sub> READING IN AUTO-ZERO MEMORY .....	5
AUTO-ZERO SEQUENCE.....	6
SENSOR READINGS AFTER AN AUTO-ZERO SEQUENCE .....	8
CONCLUSION.....	8
IMPORTANT NOTICE .....	9
ADDRESS .....	9
REVISION HISTORY .....	10

## AN014: OPERATION OF AUTO-ZERO

**BASIC PRINCIPLES FOR ALL COZIR® FAMILY SENSORS EXCEPT COZIR®-BLINK**

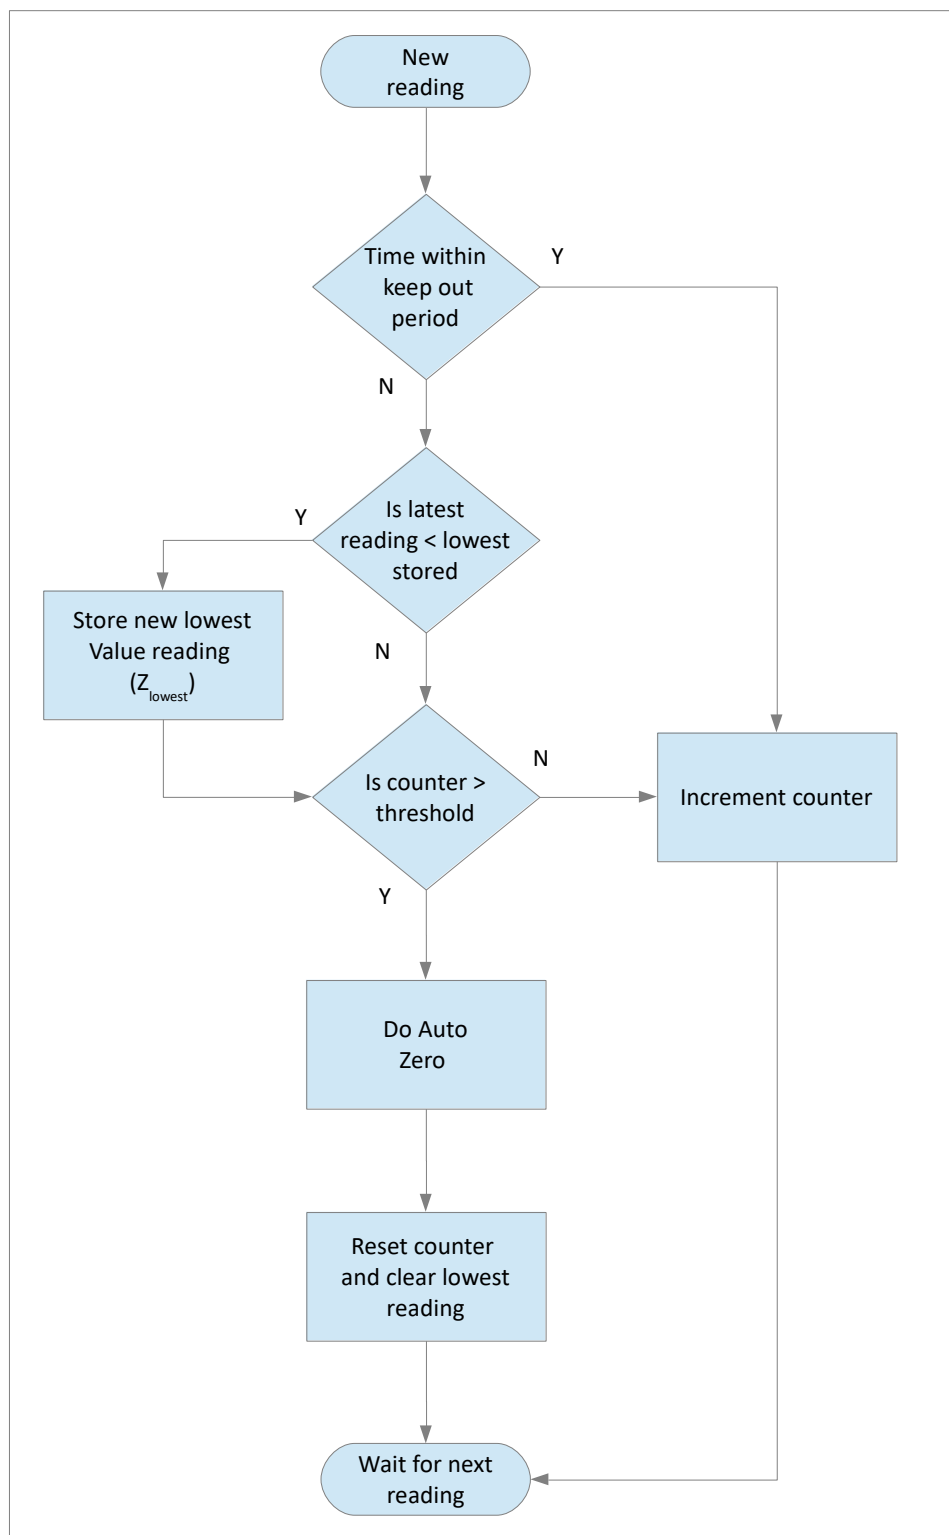

## AN014: OPERATION OF AUTO-ZERO

After the sensor is powered on, it automatically starts taking CO<sub>2</sub> measurements. The sensor can output raw CO<sub>2</sub> measurements and a filtered version of the raw data, referred to in this document as a **reading**. The filter is a customer defined variable but is set to 16 by default.

The exception to this modus operandi is the CozIR®-Blink. It automatically takes a series of measurements, filters them and outputs a single reading. It will not take any more measurements until it is power cycled, where power is switched off and back on again. It will only take one set of measurements per power cycle.

An internal counter keeps track of the number of measurements that have been taken, or as in the case of the CozIR-Blink, the number of power cycles. Once the counter has exceeded the minimum threshold value, an auto-zero sequence is actioned. The timing of the auto-zero sequence is a variable, with recommended default values for all CozIR family sensors.

All CozIR® ambient sensors have the auto-zero function enabled by default although it can be switched off. The auto-zero function is re-enabled by sending them an auto-zero period value. Assuming the auto-zero function is active, an auto-zero sequence is triggered when the counter equals or exceeds the minimum counter threshold value and the auto-zero value has been reached.

In the CozIR family of sensors, there is a minimum value for the initial auto-zero period, listed below.

### UART Mode Minimum Counter Threshold (Excluding CozIR-Blink)

Auto-Zero Period	Minimum Value	Maximum Value	Default Value	Resolution
Initial Auto-Zero	0.1 days	37.9 days	1 days	0.1 day
On-Going Auto-Zero	0.1 days	37.9 days	8 days	0.1 day

### I<sup>2</sup>C Mode Minimum Counter Threshold (Excluding CozIR-Blink)

Auto-Zero Period	Minimum Value	Maximum Value	Default Value	Resolution
Initial Auto-Zero	0 hrs	65535	12096	1
On-Going Auto-Zero	0 hrs	65535	13824	1

In I<sup>2</sup>C mode, the time-period is calculated as follows.

- On-going Auto-Zero I<sup>2</sup>C Value = Interval Time x 72 (hours)
- Initial Auto-Zero I<sup>2</sup>C Value = (Interval Time – Initial Time) x 72 (hours)

All I<sup>2</sup>C times are expressed in hours.

## **AN014: OPERATION OF AUTO-ZERO**

### **CozIR®-Blink Minimum Counter Threshold**

For the CozIR®-Blink, the auto-zero minimum threshold value is set to 50 power cycles. If the auto-zero value is set to 50, the auto-zero is done on the 51<sup>st</sup> power cycle and actioned before the filtered reading is made available by the sensor. It is recommended that the time period between auto-zero events is set to a minimum of several days to ensure consistent performance.

### **STORING THE LOWEST CO<sub>2</sub> READING IN AUTO-ZERO MEMORY**

All Gas Sensing sensors keep an internal record of the lowest measured CO<sub>2</sub> reading in internal sensor memory ( $Z_{lowest}$ ) as long as auto-zero is enabled. The sensor also keeps a record of the last CO<sub>2</sub> reading.

For the CozIR®-Blink, to improve performance, every time the sensor calculates a new reading, the previous and current values are filtered to create a new value ( $Z_{new}$ ).

$$Z_{new} = \frac{Z_{cur} - Z_{prev}}{2} + Z_{prev}$$


If the value of  $Z_{new}$  value is lower than the stored  $Z_{lowest}$ ,  $Z_{lowest}$  is updated.

For all CozIR® sensors, the operation of these processes is completely automatic and done on-board the sensor if auto-zero has been enabled. Auto-zero must be enabled before the sensor will start recording the lowest value. Note that except for the CozIR®-Blink, the  $Z_{lowest}$  value is not retained after a power down.

## AN014: OPERATION OF AUTO-ZERO

### AUTO-ZERO SEQUENCE

When the auto-zero function is run, the sensor will reset the fresh-air zero point using  $Z_{\text{lowest}}$  and the pre-programmed auto-zero value. The value used by the sensor for this fresh-air zero-point is user programmable. The sensor default value for CO<sub>2</sub> in fresh air is 400ppm.

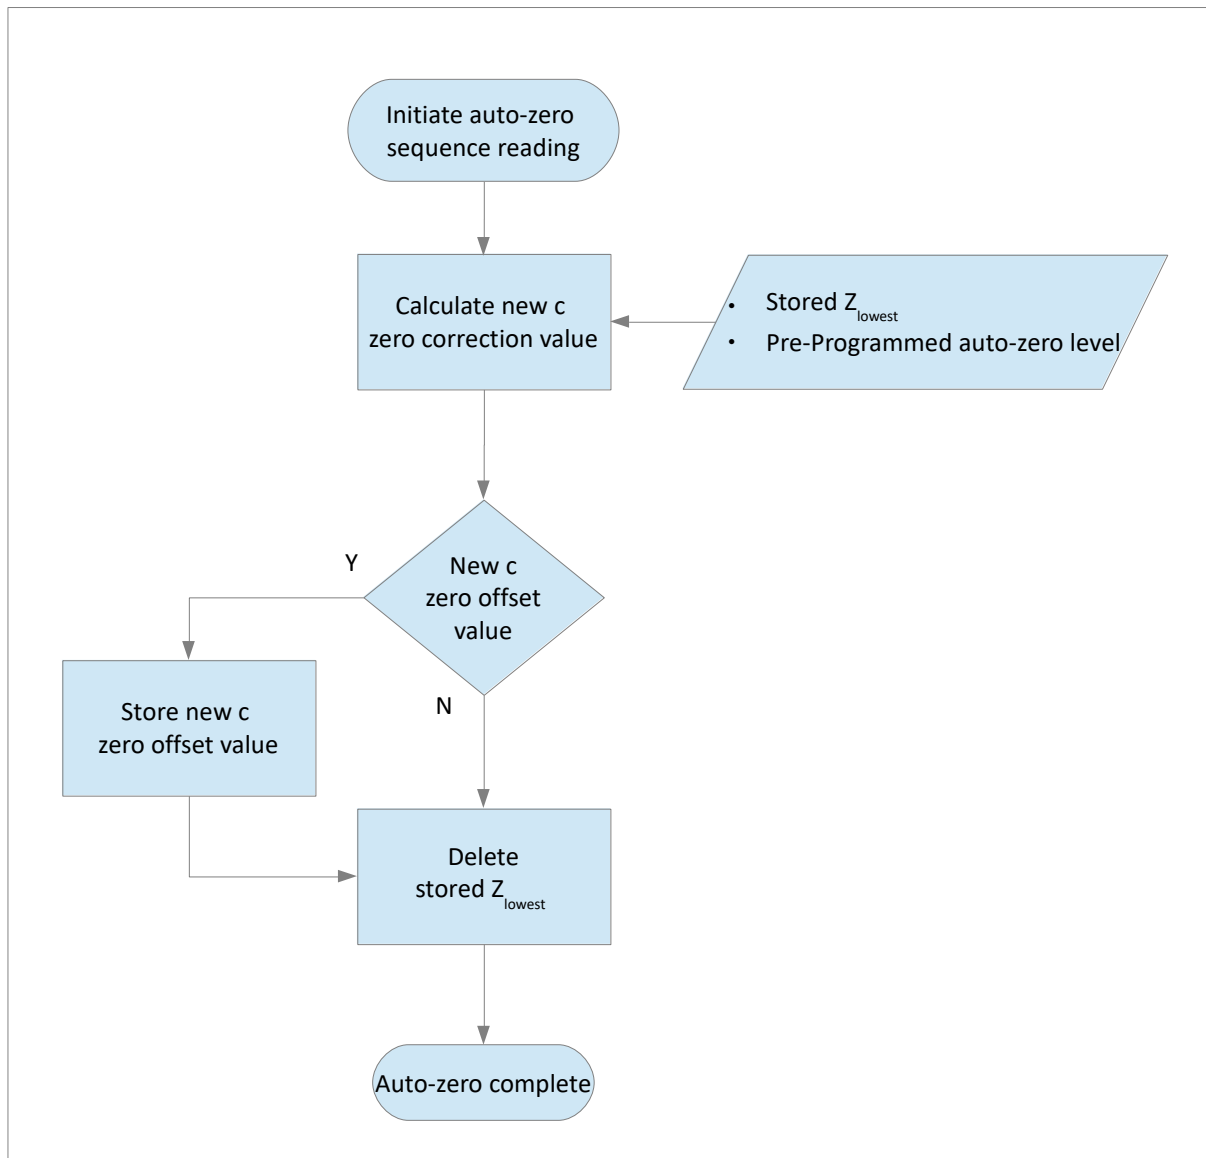

At the appropriate time, or after the pre-programmed power cycle count in the case of the CozIR®-Blink, the sensor will run the auto-zero sequence. The auto-zero sequence is a *mathematical function* designed to re-baseline the sensor. It is not a separate CO<sub>2</sub> measurement sequence. For the purposes of illustration, this application note assumes the relationship between the sensor reading output and the gas concentration input is defined by the linear equation as follows.

## AN014: OPERATION OF AUTO-ZERO


$$Y = mx + c$$

Where Y = CO<sub>2</sub> reading from the sensor

m = Scaling factor, set at the factory, fixed for the lifetime of the sensor

x = CO<sub>2</sub> gas concentration input

c = Zero offset value

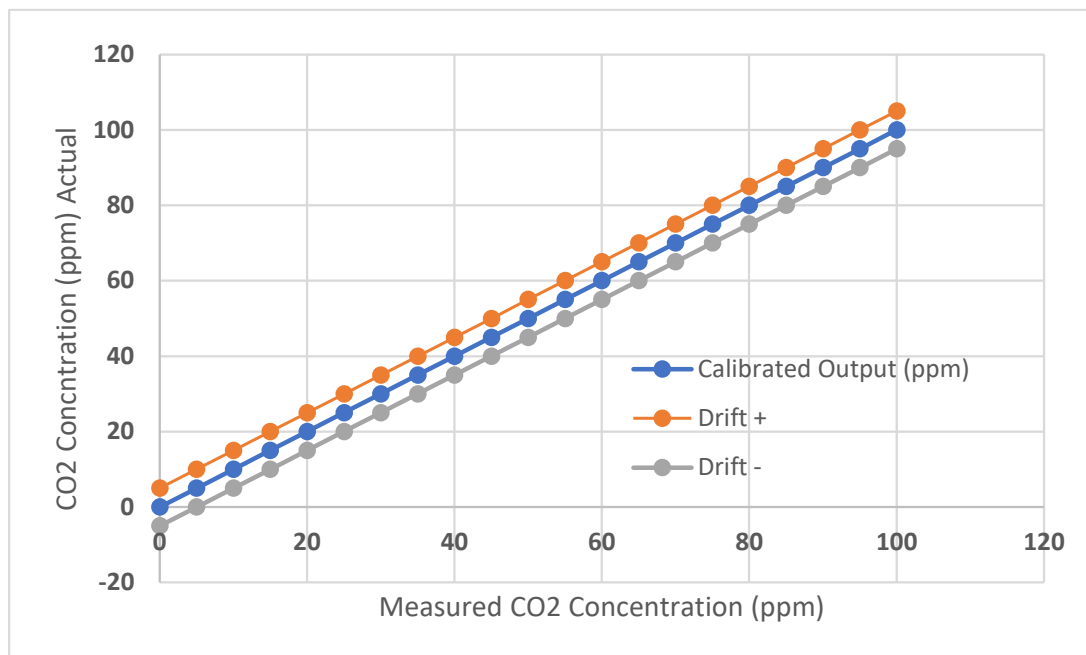

Each sensor is calibrated and tested in the factory. The scaling factor is defined during factory calibration and is fixed for the life of the sensor. The scaling factor cannot be changed in the field. When the sensor leaves the factory,  $c = 0$ . However, over time and due to other environmental factors, the sensor can drift and gives rise to a non-zero offset value for  $c$ . The purpose of the auto-zero sequence is to re-baseline the sensor and reset  $c$  to a defined value.

The actual process is significantly more complex than the illustration but uses the same data inputs, the current zero value, the lowest CO<sub>2</sub> value over the auto-zero period and the assumed lowest gas concentration value seen by the sensor over the period, defaulted to 400ppm.

By way of illustration, assume the  $Z_{\text{lowest}}$  value stored in auto-zero memory is 450ppm. And assume the pre-programmed auto-zero value is 400ppm. The sensor calculates the difference between the  $Z_{\text{lowest}}$  and the stored auto-zero value. In this case, the difference is 50ppm and the new value of  $c = -50\text{ppm}$ .

## **AN014: OPERATION OF AUTO-ZERO**

All subsequent on-board sensor measurements will use the new value of  $c$  to calculate each new measurement until the next auto-zero event. The stored  $Z_{\text{lowest}}$  value is then cleared, and the sensor begins the process again of recording the lowest measured  $\text{CO}_2$  reading.

### **SENSOR READINGS AFTER AN AUTO-ZERO SEQUENCE**

After an auto-zero sequence, the new zero offset value will be used on the next measurement and all subsequent measurements until the next auto-zero sequence. Due to the operation of the filter, the new auto-zero offset value will only affect the latest measurement in the filter calculations. Even if the auto-zero adjustment is significant, there is typically only a small change observed in the output reading due to the operation of the filter.

For the CozIR®-Blink, no change is made to the current reading after an auto-zero event. The sensor will calculate a single reading, and then run the auto-zero sequence. The new zero offset value will be used on the next set of measurements after a power cycle.

### **CONCLUSION**

The Gas Sensing auto-zero sequence is a completely automatic process that does not require any host intervention, timing control or data storage. All parameters for the process are defined as part of the sensor setup configuration and thereafter are stored and calculated on-board the sensor.



## **AN014: OPERATION OF AUTO-ZERO**

### **IMPORTANT NOTICE**

Gas Sensing Solutions Ltd. (Gas Sensing) products and services are sold subject to Gas Sensing's terms and conditions of sale, delivery and payment supplied at the time of order acknowledgement. Gas Sensing warrants performance of its products to the specifications in effect at the date of shipment. Gas Sensing reserves the right to make changes to its products and specifications or to discontinue any product or service without notice.

Customers should therefore obtain the latest version of relevant information from Gas Sensing to verify that the information is current. Testing and other quality control techniques are utilised to the extent Gas Sensing deems necessary to support its warranty. Specific testing of all parameters of each device is not necessarily performed unless required by law or regulation. In order to minimise risks associated with customer applications, the customer must use adequate design and operating safeguards to minimise inherent or procedural hazards. Gas Sensing is not liable for applications assistance or customer product design. The customer is solely responsible for its selection and use of Gas Sensing products. Gas Sensing is not liable for such selection or use nor for use of any circuitry other than circuitry entirely embodied in a Gas Sensing product.

Gas Sensing products are not intended for use in life support systems, appliances, nuclear systems, or systems where malfunction can reasonably be expected to result in personal injury, death or severe property or environmental damage. Any use of products by the customer for such purposes is at the customer's own risk.

Gas Sensing does not grant any licence (express or implied) under any patent right, copyright, mask work right or other intellectual property right of Gas Sensing covering or relating to any combination, machine, or process in which its products or services might be or are used. Any provision or publication of any third party's products or services does not constitute Gas Sensing's approval, licence, warranty, or endorsement thereof. Any third party trade-marks contained in this document belong to the respective third-party owner.

Reproduction of information from Gas Sensing datasheets is permissible only if reproduction is without alteration and is accompanied by all associated copyright, proprietary and other notices (including this notice) and conditions. Gas Sensing is not liable for any unauthorised alteration of such information or for any reliance placed thereon.

Any representations made, warranties given, and/or liabilities accepted by any person which differ from those contained in this datasheet or in Gas Sensing's standard terms and conditions of sale, delivery and payment are made, given and/or accepted at that person's own risk. Gas Sensing is not liable for any such representations, warranties, or liabilities or for any reliance placed thereon by any person.

### **ADDRESS**

Gas Sensing Solutions Ltd.  
Grayshill Road  
Cumbernauld  
G68 9HQ  
United Kingdom

**Gas Sensing Solutions Ltd.**

**Revision 1.0, 7 March 2022**

## **AN014: OPERATION OF AUTO-ZERO**

### **REVISION HISTORY**

<b>DATE</b>	<b>RELEASE</b>	<b>DESCRIPTION OF CHANGES</b>	<b>PAGES</b>
07/03/2022	1.0	First revision	All